

TRADE TYRES

Service Centre

01483 566355

DESCRIPTION OF SERVICE	INTERIM SERVICE	FULL SERVICE
Check steering / suspension components for wear and corrosion	•	•
Check steering rack gaitors if applicable	•	•
Check shock absorbers for operation	•	•
Remove wheels and check discs / drums for wear, cracks, corrosion and scoring	•	•
Inspect wheel cylinders for leaks and operation	•	•
Visually check brake hydraulic system, pipes and hoses for leaks, chafing and corrosion	•	•
Check brake pads for wear or damage	•	•
Check callipers for leaks and operation	•	•
Check horn	•	•
Check and replace of oil filter	•	•
Check and replace of air filter	•	•
Drain engine oil and refill (special or synthetic oils subject to additional charge)	•	•
Check for general oil leaks	•	•
Check and top up gearbox oil where applicable	•	•
Check and top up axle oil where applicable	•	•
Check windscreen washer operations and top up	•	•
Check / top-up power steering reservoir where applicable	•	•
Check Coolant / Antifreeze strength and top up	•	•
Check and adjust handbrake for operation and travel	•	•
Check security of hand brake linkages, lubricate if applicable	•	•
Check operation of exterior lights	•	•
Check seatbelts	•	•
Check ABS warning lights for correct operation	•	•
Check heater plug indicator (Diesel)	•	•
Check for correct clutch operation	•	•
Top up battery if applicable and check security	•	•
Check and top up brake and clutch fluid	•	•
Check windscreen wipers	•	•
Check condition and tension of fan / alternator belt. Adjust if necessary	•	•
Check condition, tension and adjust as required auxiliary drive belts	•	•
Check and top up automatic transmission fluids	•	•
Check wheel bearings for noise	•	•
Visual inspection of HT lead	•	•
Visual inspection of distributor cap	•	•
Visual inspection of rotor arm if applicable	•	•
Check propshaft / drive shaft and joints	•	•
Check drive shaft gaiters for security and leaks	•	•
Replace diesel fuel filter	•	•
Replace Spark plugs if applicable	•	•
Inspect exhaust system for leaks security and noise	•	•
Check tyre condition, tread depth, record readings (including spare)	•	•
Check and adjust tyre pressures (including spare)	•	•
Check wheels for correct balance (including spare)	•	•
Set wheel nut torque to manufacturer's settings	•	•
Carry out battery test	•	•
Check condition of fuel lines	•	•
Reset vehicle service light where applicable	•	•
Check windscreen condition	•	•
Check smoke emissions visually (Diesel)	•	•
Lubricate throttle linkage if applicable	•	•
Check radiator for leaks	•	•
Check condition of radiator cap	•	•
Check coolant hoses for leaks and condition	•	•
Check expansion bottle and cap for leak	•	•
Check electric cooling fan for operation where applicable	•	•
Test and report brake fluid boiling point	•	•
Lubricate bonnet catch	•	•
Lubricate accessible door / hinges if required	•	•
Grease steering / suspension and propshaft if applicable	•	•
Check fuel cap condition	•	•
Check tyres for indications of steering misalignment	•	•
Check security of handbrake linkages and travel, lubricate and adjust if required	•	•
Check exterior and interior mirrors condition	•	•
Check number plates	•	•
Check for timing / cam belt replacement	•	•
Check for cabin / pollen filter replacement	•	•
Replace brake fluid and bleed system	•	•
Replace petrol fuel filter	•	•
Drain out cooling system and replace coolant / antifreeze	•	•
Test starter motor for cranking operation and security	•	•